 


# Bare Fiber Adapters

## Description

- Simply strip and cleave your fiber and insert into the Bare Fiber Adapter
- Broken fibers are removed with piano wire allowing hundreds of insertions
- Accommodates 125 µm clad fiber with Insertion loss < 1 dB

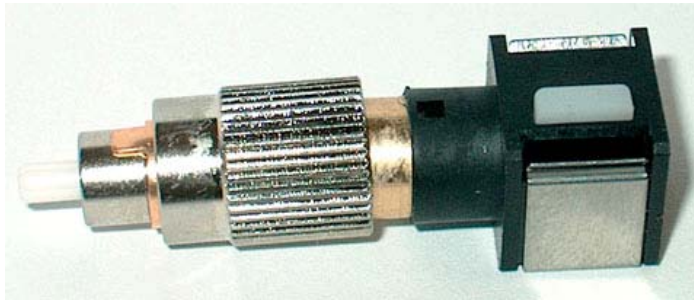

## Application:

- Quick terminating fibers
- Cable checking
- Fiber optic component production

## Ordering code:

**BFA - AA - X - X**

### XX – Connector Type

<b>SL</b>	ST
<b>SC</b>	SC
<b>PC</b>	FC
<b>E2</b>	LSH (E2000)
<b>LC</b>	LC
<b>MU</b>	MU
<b>SK2</b>	SMA905
<b>SK1</b>	SMA906

 
### Diameter of the Ferrule

<b>1</b>	125 µm
<b>2</b>	126 µm
<b>3</b>	127 µm
<b>4*</b>	140 µm


<b>Z</b>	zirconia ferrule material
<b>M*</b>	metal ferrule material

Note: \*) SK2 konektor type only


**Dimensions:**

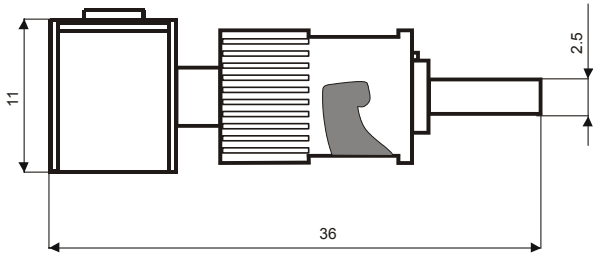


**BFA -SL-Z-2**

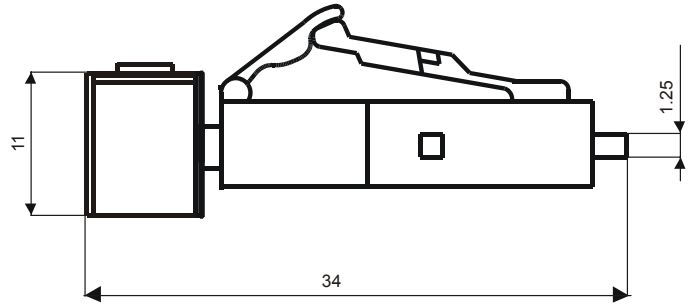 


**BFA -LC-Z-2**

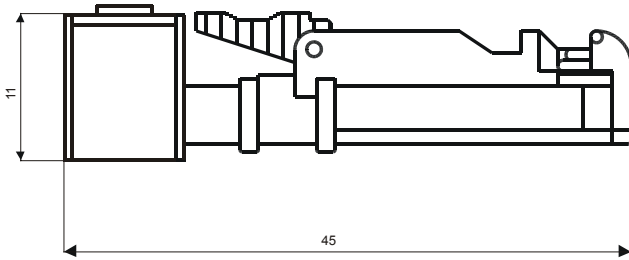 


**BFA -E2-Z-2**

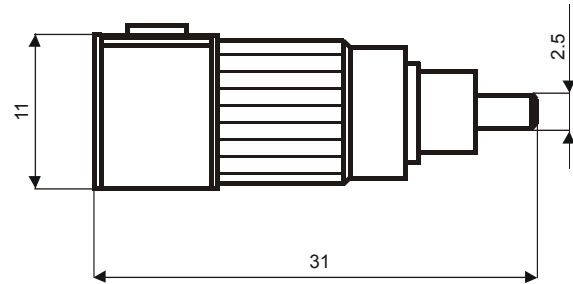 

**BFA -PC-Z-2**

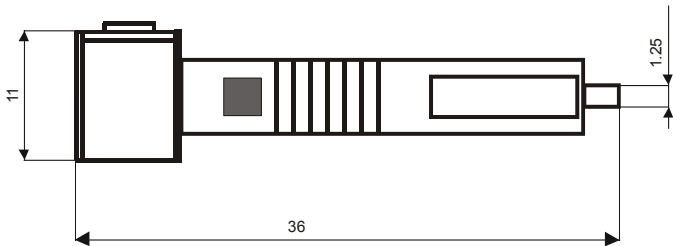 

**BFA -MU-Z-2**

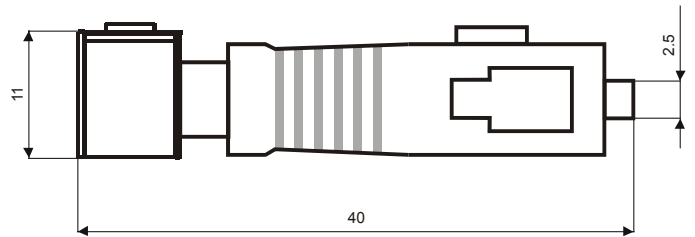 

**BFA -SC-Z-2**

**Samples of Bare Adaptors:**



**BFA -PC-Z-2**



**BFA -SC-Z-2**



**BFA -SL-Z-2**



**BFA -LC-Z-2**



**BFA -MU-Z-2**



**BFA -DIN-Z-2**